



# MOLD TEST KIT



TEST YOUR HOME  
OR OFFICE FOR MOLD  
AND ALLERGENS WITH  
OUR REUSABLE PUMP.



INSTRUCTION **GUIDE**

## UNIT FEATURES

---



### Contact Us

customer@mymolddetective.com | [www.MyMoldDetective.com](http://www.MyMoldDetective.com)

Thank you for purchasing My Mold Detective<sup>®</sup>. For best results, please read and follow instructions carefully.

---

**Testing Instructions Start Here:** Customize your report



**RECOMMENDED STEP:**

Take digital photos of your sampling locations in action. Upload your photos to your online report during the registration process. This will provide a more customized and documented report.

---

U.S. Patent | Made in China | Assembled in the U.S.A.

1-Year Manufacturer's Limited Warranty

## STEP 1: TAKE AIR SAMPLES

a



### Outdoor Air Sample:

- On one cassette, mark the box labeled "Outdoor Sample." (This will be your "required" control sample.)
  - Ensure you have a power outlet to plug in to. You may need an extension cord.
  - Take sample when it's not raining or snowing, in an open area 10 ft. away from the structure and overhangs, 3 to 5 ft. off the ground. (Use a chair to set the pump on.)
- .....

b




- Remove the tape flap on the top and bottom of the air cassette. (Save flaps for resealing cassettes.)
- Open the pump lid. (This will remain open during testing.)
- Insert cassette onto the air sample inlet tray and secure firmly in place.

c



- Push the green button to start the sample, a red light will illuminate during the testing. The pump will shut off automatically after 5-minute sample is complete.

d

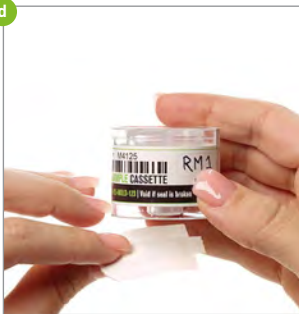

- Reseal top and bottom of air cassette with tape flaps after air sampling is complete.

---

### Indoor Air Sample:

- Mark the remaining air cassette(s) with the room name. All indoor sample(s) should be taken in the middle of the room, 3 to 5 ft. off the ground.
- Repeat steps (b) through (d) outlined in Outdoor Air Sample section.

*Note: Air Cassette limited to one use. Do not reuse cassettes.  
Take indoor air samples within 15 minutes of the outdoor air sample.*


## STEP 2: TAKE SURFACE SAMPLES



- Write the surface location name on the tape label.
- If present: use the serial number on the back of the tape lift when registering your sample online.



- Peel off the translucent cover slip to expose the tape's tacky surface.

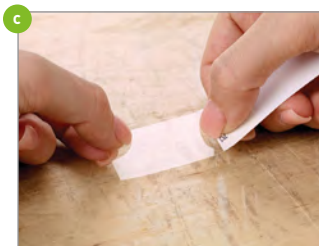

- Firmly press the tape onto the suspect surface.



- Close the tape onto the white backing and place into the small envelope provided.
- One tape lift per small envelope provided.

*Note: Only one surface sample per tape lift*

## STEP 3: REGISTER ONLINE

---



Visit [MyMoldDetective.com](https://www.mymolddetective.com) to register your samples

Click the “Register Samples” button at the top of the homepage and follow the instructions.

.....

Create a new account

.....

Complete payment for the lab analysis and note your confirmation number.

## STEP 4: MAIL SAMPLES

---

### Shipping Options:

a

Free Shipping  
5-10 days

OR

Pay & Track  
Shipping  
2-3 days

b

### Warning

- **Free Shipping Option:** is slower and takes between 5 – 10 business days to reach the lab.
- **UPS Option:** For a quicker option that allows you to track your samples, choose the 2 – 3 day Pay & Track Shipping.

c



- Write your confirmation number on the front of the prepaid envelope or package if you chose Pay & Track Option.

d



- Insert up to (8) eight cassettes and unlimited tape lifts into one pre-paid envelope and mail to the lab.  
\*Sending more than one envelope or package may cause samples to arrive to lab separately and cause possible delays with analysis.